

ATTENTION:

- Not to be used in normal heater operation
- Disconnect the fuel line from the heater first to prevent flooding of the heater and place in a suitable receptacle.

1) To enter the fuel priming mode, press the settings icon, and scroll to 'Information'. Press the rotary dial to confirm.

2) Scroll along to the 'Run Time' submenu and press the dial to confirm. Press and hold the settings button and the return button together to enter the priming mode sub screen.

3) When the display reads 'Prime Fuel?' press the rotary knob to confirm. The fuel pump will begin to pulse quickly. The display will automatically exit this mode if left unattended for 3 seconds.

4) Use the rotary knob to adjust the pumping time and press the return button to go back, or let the countdown timer run down (default runtime is 90 seconds).

