

Code on Digital/OLED Control	Error Description	Error Light (Flashing Light) on Rotary Control
00	No Fault	No Flashes
10	Second start failure	1 Flash
20	Heater does not light in time	2 Flashes
21	Combustion termination	
30	Voltage too high	3 Flashes
31	Voltage too low	
A9	Voltage too low	
41	Internal Temperature too high during purge-cycle	4 Flashes
50	Flame sensor open circuit	5 Flashes
51	Flame sensor short circuit	
52	Hot air sensor open circuit	
53	Hot air sensor short circuit	
54	Hot air sensor overheated	
65	Inside temperature sensor broken circuit	6 Flashes
66	Inside temperature sensor short circuit	
68	Outside temperature circuit broken circuit	
69	Outside temperature circuit short circuit	
70	Fuel pump short circuit	7 Flashes
71	Fuel pump broken circuit	
80	Fan broken circuit	8 Flashes
81	Fan short circuit	
82	fan speed too low	
83	Fan speed too high	
84	Fan speed measurement fault	
85	Fan motor failure to start	
90	Glow pin open circuit	9 Flashes
91	Glow pin short circuit	
92	Glow pin high resistance	
93	Glow plug drive open circuit	
a2	Overheating	10 Flashes
b4	Overheating or sensor fault	11 Flashes
b5	Overheat sensor fault	
c0	Hydro only - blower relay open circuit	12 Flashes
c1	Hydro only - blower relay short circuit	
c4	Preheating temperature broken circuit	
c5	Preheating temperature short circuit	
d0	Crystal oscillator in ECU broken	13 Flashes
d1	Fault information storage failure	
d3	Maintenance reminder	
-	Earth Fault	Constant Flash
-	Connection/Communication Error	Traffic Light



MV Heating (UK) Limited

Unit 6, Second Avenue Business Park, Millbrook, Southampton, Hants SO15 0LP
 Telephone: 023 8052 2345 Fax: 023 8052 8808 Email: sales@mvheating.co.uk
www.mvheating.co.uk