


1. Locate the third 'accessory' plug on your rotary control/mini timer.
2. Remove the adaptor lead (6-way plug to 4-way plug) from the box.

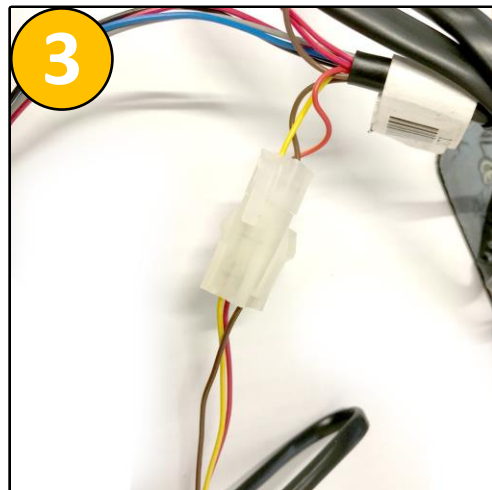

3. Plug the 4-way end of the adaptor into the third 'accessory' plug of the rotary control/timer, making sure it's correctly oriented.
4. Plug the 6-way plug of the adaptor into the 6-way plug on the GSM/remote module, making sure it is correctly oriented.