

ATTENTION:

- Not to be used in normal heater operation
- Disconnect the fuel line from the heater first to prevent flooding of the heater and place in a suitable receptacle.

1. To enter the fuel priming mode navigate to the clock face using the arrow Keys. The clock face will flash.

2. Press both arrow keys together. P1 will appear on the screen.

3. Select P2 by pressing any arrow key and confirm with OK.

4. The fuel pump will begin to rapidly pump fuel.

5. It will automatically shut down after 90 seconds. Or press 'OK' or the power button to stop pumping at any time.

6. When fuel has reached receptacle, stop priming function by pressing 'OK' or the power button.

Reconnect fuel line and original control unit to the heater

CLOCK FACE

