

<b>Fault Code</b>	<b>Description</b>	<b>Diagnostic</b>
E-01	Ignition Failure	Check the fuel (dirty, air in lines or lackthereof) Check voltage to the heater
E-02	Flame Extinguished	Check the fuel line (dirty, air in lines or lackthereof)
E-03	Voltage too High	12V - Higher than 15V 24V - Higher than 30V
E-04	Voltage too Low	12V -Lower than 10V 24V - Lower than 18V
E-05	Air inlet temperature is too high	Greater than 50°C
E-06	Internal Temperature Sensor	There is an open or short circuit on the air inlet sensor
E-07	Fuel Pump	There is an open or short circuit on the fuel pump
E-08	Air Motor	There is an open or short circuit on the air motor
E-09	Air Motor Speed	The air motor speed is irregular
E-10	Glow Pin	There is an open or short circuit on the glow pin
E-11	Heater Overheated	Temperature inside the unit greater than 260°C
E-12	Overheat Sensor	There is an open or short circuit on the overheat sensor
E-13	Control Unit (Timer) Signal Interrupted	There is an open or short circuit on the yellow/gray communication line
E-14	Atmospheric pressure sensor (Altitude Sensor)	There is an open or short circuit on the atmospheric pressure sensor
E-18	Communication Failure	Unplug all connections and check for any damaged or crooked pins



### MV Heating (UK) Limited

Unit 6, Second Avenue Business Park, Millbrook, Southampton, Hants SO15 0LP  
Telephone: 023 8052 2345 Fax: 023 8052 8808 Email: sales@mvheating.co.uk  
[www.mvheating.co.uk](http://www.mvheating.co.uk)